

## **MX201 MIXER TIMER**

### **MOUNTING AND CONNECTING THE MIXER TIMER.**

Mount the mixer timer using the supplied mounting bracket. Plug the timer's power connector into a 120-volt outlet. Plug the mixer into the back on the mixer timer.

### **OPERATING THE MX201.**

When ready to mix the dry products, press the DRY MIX switch. The mixer will then run for the desired time.

After adding the milk or buttermilk, press the WET MIX switch. The mixer will then run for the desired time.

### **PROGRAMMING.**

The programming of the MX201 is simple. Just carefully follow the steps listed below.

1. Press the DRY MIX Switch and WET MIX Switch simultaneously. The display will show "SEL1."
2. Select DRY MIX or WET MIX by pressing the appropriate switch. The time for the selected switch will show on the display.
3. Press the DRY MIX Switch to increase the time. The time will automatically increase as long as the switch is held in.
4. Press the WET MIX Switch to decrease the time. The time will automatically decrease as long as the Switch is held in.
5. When the desired time is showing in the display, press the PROG Switch to store the new time into memory.
6. If the other time is to be changed, press its switch, and repeat steps 3, 4, and 5.
7. If no other changes are to be made, press both the DRY MIX AND WET MIX switches simultaneously to exit the programming mode. The MX201 is now ready to use with the new times.