

MOUNTING THE PROTIME.

Attach the mounting bracket to the hood or other surface. Use the four 6-32 X 1/4 screws supplied to attach the PROTIME to the mounting bracket. Note that the PROTIME may be rotated downward by twenty degrees by using the appropriate mounting holes. The power on switch is located in the back, top left.

OPERATING INSTRUCTIONS

STARTING A TIMING CYCLE

Operating the PROTIME is straight forward, simply press the switch representing the product to be cooked. When the alarm sounds, either because of a stir alarm, hold time, or the end of the cooking time, simply press the switch whose lamp is flashing.

CANCELLING A TIMING CYCLE

In the event you need to cancel a cook time hold the switch down for the cook time for 5 seconds and the timer will reset.

HOLD TIME OPERATION

Hold times will start timing when a product has finished cooking. If another product is being cooked (a timer is counting down), the lamp for the HOLD time will be dimmer than normal (indicating a hold time running in the background). Pressing the switch for the HOLD time will show the HOLD time in the display.

PROGRAMMING THE PROTIME

A. PROGRAMMING THE COOKING TIME.

1. Press the Switch 1 (P) and Switch 4 (P) switches simultaneously. This action enters the programming mode. The display will show "SEL1."
2. Press the Switch 1 (T) switch. This action tells the computer that a COOKING time is to be changed. The display will show " 2."
3. Next, press the switch whose COOKING time is to be changed. The time for that switch will show in the display.
4. Press Switch 2 (+) switch to increase the minutes. Note, to increase the seconds, press in Switch 1 while pressing the "+" switch.
5. Press Switch 3 (-) switch to decrease the minutes. Note, to decrease the seconds, press in Switch 1 while pressing the "-" switch.
6. When the desired time is shown in the display, press Switch 4 (E) switch. The new time is now stored into memory. The display will show "SEL1." Go to A2 or B2 or C2 to continue making changes, press Switch 4 (E) to exit the program mode.

B. PROGRAMMING THE STIR TIME.

1. Press the Switch 1 (P) and Switch 4 (P) switches simultaneously. This action enters the programming mode. The display will show "SEL1."
2. Press Switch 2 to select a STIR time. This action tells the computer that a STIR time is to be changed. The number "2" will show in the display.
3. Select the STIR time to be changed: Switch1 = first STIR time, or Switch 2 = the second STIR time. The display will show "3."
4. Press the switch whose STIR time is to be changed. The STIR time for that switch will show in the display.
5. To change the time, or exit, go to step A.4. above and perform A.4., A.5., and A.6.
6. Note, to eliminate a STIR time, make the STIR time zero

Catcon Products Inc.
7711 Sand Street, Ft Worth, TX 76118
817-590-8718, FAX 817-590-8756, email: sales@catconproducts.com